
NOTE:

- BAKE/TIME BAKE Bake and broil units cycle during preheat and balance of operation, one unit is on at a time
- CLEAN Broil unit only on during 1st 30 minutes or until oven reaches 750°F. During balance of clean oven will cycle between bake and broil units.

Cooktop Lockout Operation:


When the self-clean cycle is started, locking the door closes the cooktop lockout switch. This energizes the cooktop lockout relay located on the back of the range. The relay contacts will open and disable the surface elements. The surface elements will remain inoperable until the self-clean operation is complete.

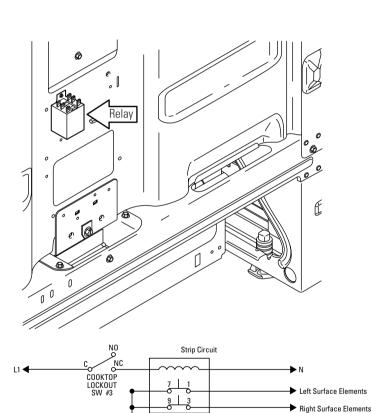

SCHEMATIC DIAGRAM

A WARNING POWER **MUST** BE DISCONNECTED BEFORE SERVICING THE APPLIANCE


PT. NO. 191D4617P001

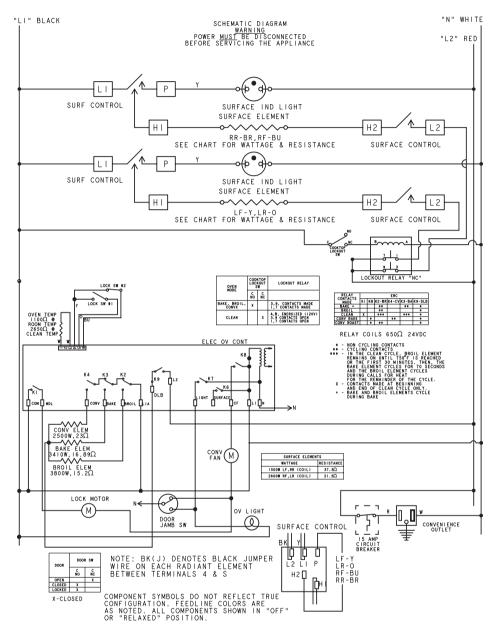

WIRING DIAGRAM

A WARNING POWER **MUST** BE DISCONNECTED BEFORE SERVICING THE APPLIANCE

PT. NO. 191D4617P001

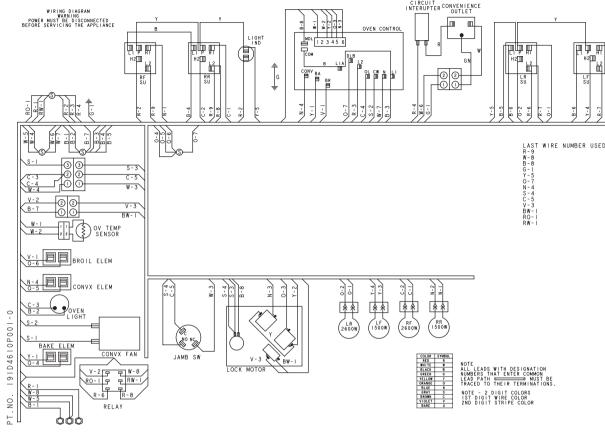

STORAGE DRAWER REMOVAL

To Remove:

- Pull the drawer out until it stops.
 Lift the front of the drawer until the stops clear the guides.
- 3. Remove the drawer.

To Replace:

 
- 1. Place the drawer rail on the guides.
- 2. Push the drawer in until it stops.
- 3. Lift the front of the drawer and push in until the stops clear the guides.

 
LOCKOUT RELAY "NC"

4. Lower the front of the drawer and push in until it closes.

If Drawer Drawer


If Drawer Will Not Close





Rear Drawer Support is on Top of Guide Rail on the High Side

 If Drawer is Crooked



MODEL NUMBER

JCBP24 JCBP26 JCBP35 SERVICE INFORMATION DO NOT DISCARD

Pub. No. 31-14285

ND 9122004